

How does the ion concentration affect the rate of electrolysis?

Chemistry SL Internal Assessment

mhz237

Word count: 2153

1 Introduction and Background Knowledge


Electrochemistry emerged in the early 1800s, marked by the creation of the first electrolytic cell by Alessandro Volta, and the subsequent discovery of water electrolysis by William Nicholson (Fabbrizzi, 2019). The voltaic pile is considered the first artificial battery that provided continuous current to a circuit, laying a solid foundation for electricity-related studies. The discovery of water electrolysis by Nicholson, on the other hand, testified the composition of water and showed that water can be chemically decomposed. However, electrochemistry is still a relatively young subdiscipline in chemistry, and there are still many unknowns about the mechanism of electrolysis.

That work inspired Faraday’s quantitative study on the general pattern of electrolysis, which resulted in Faraday’s laws of electrolysis (Stock, 1991). Faraday concluded the amount of deposition is proportional to the amount of electric charge passing through the electrolyte, showing that electrolysis fundamentally involved the transfer of electrons. The study revealed the electric nature of many substances, formulated terms like ions, and greatly contributed to human’s understanding of the submicroscopic world.



Nowadays, electrolysis plays a vital role in chemical industry fields like metal refining, electroplating, and mass production of sodium and chlorine. Water electrolysis is also currently the main method for the production of hydrogen and oxygen (Flowers, 2019).

Electrolysis experiments also play a pivotal role in chemistry education, since it allows students to explore the property of different materials and reveal the atomic nature of substances (e.g. showing that water consists of hydrogen and oxygen atoms).

The ion concentration of a solution is an issue frequently emphasized in electrochemistry. For instance, most electrolysis experiments require solutions prepared from distilled or deionized water to avoid ionic contaminants (Atkins & de Paula, 2014), as pure distilled water contains a low concentration ions. However, when ionic contaminants, such as magnesium chloride, is dissolved in water, it dissociates and form a significant number of ions. In the case of magnesium chloride, Mg^{2+} tend to bound with H_2O and form $[\text{Mg}(\text{H}_2\text{O})_6]^{2+}$, which donates proton to water. Reaction described by Equation 1 indicates the main mechanism of dissociation.

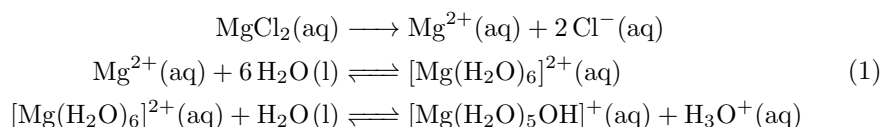

When an external voltage is applied, hydronium ions (H_3O^{+}) is attracted to the anode, and hydroxide ions (OH^{-}) is attracted to the cathode, resulting in the formation of hydrogen and oxygen gas.



where Equation 2 formulates the reaction happening at the cathode, Equation 3 formulates the reaction happening at the anode, and Equation 4 describes the overall reaction. The reaction happens only when the solution is acidic. The production of H_2 and O_2 results in vibrant effervescence in the solution.

Some other side reaction may also takes place, like Cl^- can compete with OH^- at higher concentrations. This will be further discussed in Section 2.

Since the electrolysis is dependent ionic concentration, understanding how ion concentration influences the rate of electrolysis is of great importance.

Research question: How does the ion concentration in water (measured using magnesium chloride (MgCl_2) concentration) affect the rate of electrolysis?

2 Hypothesis and Reasoning

As is shown by reactions described in Equation 1, magnesium chloride (MgCl_2) solution whose concentration is significantly higher than $1 \times 10^{-7} \text{mol} \cdot \text{dm}^{-3}$ contributes to most of the ions in the solution.

According to Faraday's laws of electrolysis, the extent of reaction (ξ) is proportional to the amount of electric charge passing through the electrolyte, can be calculated by the product of the current passing through the electrolyte and time, as is shown in Equation 5. (The current is considered constant due to the small change of the solution concentration)

$$\begin{aligned}\xi \propto Q &= I \times t \\ &= \frac{V}{R} \times t\end{aligned}\tag{5}$$

The definition of conductivity $\kappa = \frac{l}{A \times R}$ gives the equation for the resistance of the electrolyte, as shown in Equation 6.

$$R = \frac{l}{A \times \kappa}\tag{6}$$

For a specific electrolyte, molar conductivity Λ_m is given by $\Lambda_m = \frac{\kappa}{c}$. This gives an overall equation for the rate of electrolysis, as shown in Equation 7.

$$\begin{aligned}\xi \propto Q &= \frac{V}{\frac{l}{A \times \kappa}} \times t \\ &= \frac{\Lambda_m c A V}{l} \times t \\ \text{rate} &\propto \frac{d\xi}{dt} \\ &= \frac{\Lambda_m A V}{l} \times c\end{aligned}\tag{7}$$


Magnesium chloride is a moderately strong electrolyte, which means Λ_m decreases slightly as the concentration of magnesium chloride increases. At low concentration, it can be viewed as a constant.

A hypothesized value set is difficult to calculated as there lacks Λ_m data for magnesium chloride (MgCl_2).

Hypothesis 1: The rate of electrolysis will increase roughly linearly with magnesium chloride (MgCl_2) concentration at low concentrations, but this increase will become slower at higher concentrations. (due to decreased molar conductivity and competing side reactions.)

During the electrolysis, the main reaction is the electrolysis of water. Hydrogen and oxygen are produced, forming colorless effervescence.

However, when the concentration of $[\text{Cl}^-]$ is high, more $[\text{Cl}^-]$ tend to compete with , the side reaction begin to compete and eventually dominate.



Hypothesis 2: The following phenomena will be observed— the higher the concentration, the more vigorous effervescence is released from electrodes, the greener the liquid around the anode becomes.

To measure the rate of reaction, the extent of reaction during a given time period has to be measured. the following methods can be used:

- Measure the amount of hydrogen produced using water displacement.
- Measure the mass change of the electrolyte.
- Record the current passing through the electrolyte.

The first method is adopted since the value of the mass change and current are expected to be a very small number, which may be more significantly affected by the uncertainty of the measurement.

3 Experiment Design

3.1 Variables

- Independent variable: ion concentration (manipulated using the concentration of MgCl_2 : 0.2, 0.4, 0.6, 0.8 and 1.0M). Mg_2^+ and Cl^- are chosen because they are easily dissolved in water and common impurities in water. These concentrations are used because they are small enough to make ensure small change in molar conductivity, but large enough to make the reaction happen at a measurable rate.
- Dependent variable: Rate of electrolysis. This is measured by the amount of hydrogen produced divided by the time taken.
- Controlled variables: Temperature, atmospheric pressure, voltage, distance between electrodes, material of the electrodes and time duration of the experiment, etc. They are listed in Table 1.

3.2 Materials

The apparatus and reagents used in this experiment are listed below:

- * 1 Retort stand with clamp ($\approx 50 \text{ cm}$)

Table 1: Controlled variables

Variable	Value	Reason to control	Method to control
Temperature	25°C	Can significantly affect the rate of chemical reactions.	Complete the experiment during a short time period, in an air-conditioned room.
Atmospheric pressure	1.0 atm	Might change the volume and pressure of the gas collected	Complete the experiment during a short time period.
Voltage	16 V	Can affect the current passing through the electrolyte.	Use the same cell throughout the experiment.
Distance between electrodes	5.0 cm	Can affect the resistance between electrodes.	Use the same setup throughout the experiment.
Material of the electrodes	Graphite	Can affect the conductivity and chemical property of the electrodes.	Use the same electrodes throughout the experiment.
Time duration of the experiment	20 min	Short time leads to inaccuracy, but the concentration change and side-effect accumulates over time.	Always time 20 min using a stopwatch.

* 1 Side-armed U-shaped tube (≈ 100 mL), with a pair of cork stoppers penetrated by graphite electrodes.

* 1 Rubber tube.

* 1 Gas syringe (≈ 20 mL, ± 0.1 mL).

* 1 Student power pack (≈ 16 V) and conducting wire.

* 1 Volumetric flask (100 mL, ± 0.5 mL).

* 1 Analytical balance (> 30 g, ± 0.01 g)¹.

* 1 Beaker (≈ 200 mL).

* 1 Wash bottle (≈ 500 mL).

* Magnesium chloride hexahydrate (> 200 g).

* Distilled water (> 2000 mL).

The reagents and their safety information are summarized in Table 2.

¹A balance of higher precision is used in the experiment. This might have been unnecessary if balance with a lower precision level were available.

3.3 Setup diagram

The setup of the experiment is shown in Figure 1. The left side of the setup is used to measure the rate of electrolysis. The right side of the setup is used to prepare the solution of given concentration.

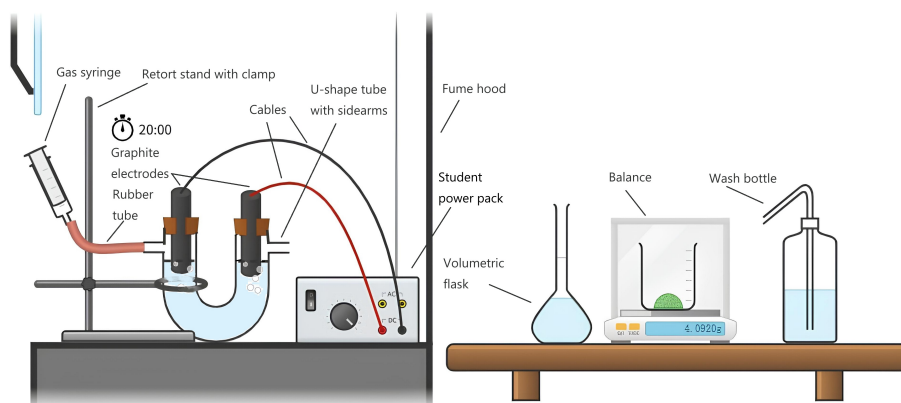


Figure 1: Setup diagram¹

3.4 Procedure

1. Measure $m = 2.06\text{ g}$ of $\text{MgCl}_2 \cdot 6\text{H}_2\text{O}$ in a beaker using analytical balance. Dissolve it with approximately 50 mL distilled water.
2. Transfer the solution to a 100 mL volumetric flask. Rinse the beaker with distilled water and put it into the flask as well.
3. Slowly add distilled water into the volumetric flask until it is just below the calibration mark. Use teat pipette to slowly add more distilled water until the base of the meniscus reaches the mark.
4. Insert the stopper and invert the solution for multiple times to ensure solution homogeneity.
5. Transfer the solution to the sidearmed U-shaped tube. Insert the cork-stopper fitted with graphite electrodes and attach a syringe to one side arm using flexible tubing.
6. Mark the meniscus in the U-shaped tube using thin marker pen.
7. Switch the power supply to 16 V and turn it on. Start the timer at the same time.
8. Keep adjusting the syringe to ensure that the meniscus is on the marked line.
9. Turn off the power supply when the timer reaches 20 min.

¹This diagram is made using chemix and mspaint.

10. Repeat steps 1-9 twice to get two additional trials. By doing so, each concentration is tested three times to ensure reproducibility.
11. Repeat steps 1-10 with $m = 4.12\text{ g}, 6.18\text{ g}, 8.24\text{ g}$ and 10.30 g .

3.5 Risk Assessment

Table 2: Materials and Safety Information

Name	Potential Hazards	Measure/Precaution
Distilled water	Physical, health, environmental hazards: Not Classified	None
Magnesium chloride	Nonhazardous per GHS; treat all lab chemicals with caution	Use protective gloves/clothing/eye protection. Avoid inhalation, ingestion, or skin/eye contact. First-aid measures included.
Hydrogen ¹	H220: Extremely flammable gas; H280: Gas under pressure	P210: Keep away from ignition sources. P377: Do not extinguish leaking gas fire unless leak can be stopped safely.
Oxygen ¹	H270: May intensify fire; oxidizer. H280: Gas under pressure	P220: Keep away from combustibles. P244: Valves free from oil/grease. In fire: Stop leak if safe.
Chlorine water ^{1,2}	Acute toxicity (oral, dermal, inhalation Cat. 5); skin/eye irritation; inhalation toxicity for chlorine gas	Avoid breathing vapors; immediate medical attention if exposed. First-aid and dilution instructions provided.
Student power supply	Below safe voltage (24V DC)	No special precautions. Disconnect power in unexpected events.

Sources: (Chemical Suppliers Ltd., 2023; Flinn Scientific, Inc., 2014b; Linde plc, 2022; ChemicalBook, 2025; Flinn Scientific, Inc., 2014a)

¹ Product. Other supplier of the same chemical substance is referred to for the MSDS table and hazard assessment. These products are in very low amount (hydrogen and oxygen less than 10 mL, chlorine gas less than 1mL) and are not able to cause as much potential hazard, therefore disposal or accidental release is not listed in the table.

² Chlorine may be released as gas, or undergo complicated side reactions in the solution during the experiment. The experiment will therefore be conducted in a fume hood. However, it still shares similar properties with chlorine water, so chlorine water is used for hazard assessment.

Conclusion: With PPE, teacher supervision, and basic laboratory discipline, overall risk is low for high school students.

4 Results

4.1 Raw data

Raw data can be found in Tables 3 and 4.

Table 3: Raw data (Qualitative)

Exp. No.	Effervescence	Odor	Green Color
1	Slight	Present	None
2	Slight	Present	None
3	Moderate	Slight	None
4	Moderate	Slight	Slight
5	Vigorous	Strong	Slight

Table 4: Raw data (Quantitative)

Experi- ment No.	Trial	Mass (g)	Solution Volume (mL)	Gas Volume (mL)	Time (s)
1	1	4.0920 ± 0.0001	100.0 ± 0.5	4.2 ± 0.1	1200 ± 1
1	2	4.0593 ± 0.0001	100.0 ± 0.5	3.9 ± 0.1	1200 ± 1
1	3	4.0300 ± 0.0001	100.0 ± 0.5	3.9 ± 0.1	1200 ± 1
2	1	8.1372 ± 0.0001	100.0 ± 0.5	6.9 ± 0.1	1200 ± 1
2	2	8.1031 ± 0.0001	100.0 ± 0.5	7.0 ± 0.1	1200 ± 1
2	3	8.1203 ± 0.0001	100.0 ± 0.5	7.1 ± 0.1	1200 ± 1
3	1	12.1982 ± 0.0001	100.0 ± 0.5	10.0 ± 0.1	1200 ± 1
3	2	12.2637 ± 0.0001	100.0 ± 0.5	10.0 ± 0.1	1200 ± 1
3	3	12.1816 ± 0.0001	100.0 ± 0.5	9.9 ± 0.1	1200 ± 1
4	1	16.2455 ± 0.0001	100.0 ± 0.5	12.9 ± 0.1	1200 ± 1
4	2	16.2241 ± 0.0001	100.0 ± 0.5	12.8 ± 0.1	1200 ± 1
4	3	16.2502 ± 0.0001	100.0 ± 0.5	13.0 ± 0.1	1200 ± 1
5	1	20.1607 ± 0.0001	100.0 ± 0.5	14.1 ± 0.1	1200 ± 1
5	2	20.3037 ± 0.0001	100.0 ± 0.5	14.9 ± 0.1	1200 ± 1
5	3	20.3013 ± 0.0001	100.0 ± 0.5	14.3 ± 0.1	1200 ± 1

4.2 Processed data

Processed data can be found in Table 5. The rate is plotted against the magnesium chloride (MgCl_2) concentration, and the graph is plotted in Figure 2.

Table 5: Processed data with additional measurements

MgCl_2 concentration (mol L^{-1})	Average gas volume (mL)	Amount of H_2 (10^{-4} mol)	Rate of electrolysis (10^{-7} mol s^{-1})
0.200 ± 0.002	4.000 ± 0.150	1.633 ± 0.061	1.361 ± 0.051
0.399 ± 0.001	7.000 ± 0.100	2.857 ± 0.041	2.381 ± 0.034
0.601 ± 0.002	9.967 ± 0.050	4.068 ± 0.020	3.390 ± 0.017
0.799 ± 0.001	12.900 ± 0.100	5.265 ± 0.041	4.388 ± 0.034
0.996 ± 0.004	14.433 ± 0.400	5.891 ± 0.163	4.909 ± 0.136

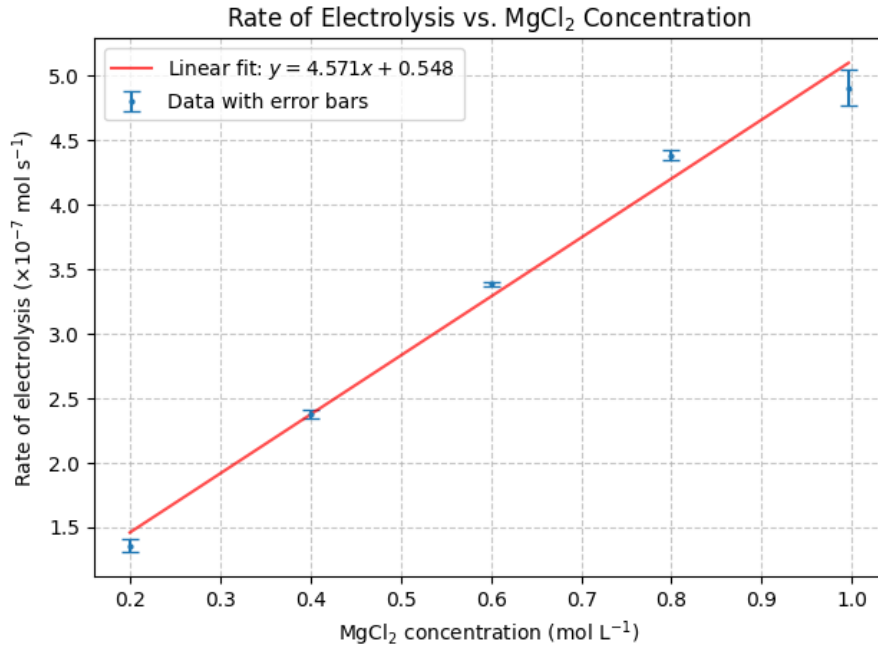


Figure 2: Rate of electrolysis against magnesium chloride (MgCl₂) concentration

4.3 Sample processing

$$\begin{aligned}
 \bar{V}_{\text{H}_2} &= \frac{V_1 + V_2 + V_3}{3} \\
 &= \frac{4.2 \text{ mL} + 3.9 \text{ mL} + 3.9 \text{ mL}}{3} \\
 &= 4.0 \text{ mL}
 \end{aligned} \tag{9}$$

$$\begin{aligned}
 \Delta V_{\text{H}_2} &= \pm \frac{\max\{V_1, V_2, V_3\} - \min\{V_1, V_2, V_3\}}{2} \\
 &= \pm \frac{4.2 \text{ mL} - 3.9 \text{ mL}}{2} \\
 &= \pm 0.15 \text{ mL}
 \end{aligned} \tag{10}$$

$$\begin{aligned}
 n_{\text{H}_2} &= \frac{\bar{V}_{\text{H}_2}}{24.5 \text{ L} \cdot \text{mol}^{-1}} \\
 &= \frac{4.0 \text{ mL}}{24.5 \text{ L} \cdot \text{mol}^{-1}} \\
 &= 1.63 \times 10^{-4} \text{ mol}
 \end{aligned} \tag{11}$$

$$\begin{aligned}
 \Delta n_{\text{H}_2} &= \frac{\Delta V_{\text{H}_2}}{\bar{V}_{\text{H}_2}} \times n_{\text{H}_2} \\
 &= \pm 3.75\% \times 1.63 \times 10^{-4} \text{ mol} \\
 &= \pm 6.03 \times 10^{-5} \text{ mol}
 \end{aligned} \tag{12}$$

$$\begin{aligned}
\text{rate}_{\text{H}_2} &= \frac{n_{\text{H}_2}}{1200 \text{ s}} \\
&= \frac{1.63 \times 10^{-3} \text{ mol}}{1200 \text{ s}} \\
&= 1.36 \times 10^{-7} \text{ mols}^{-1}
\end{aligned} \tag{13}$$

$$\begin{aligned}
\Delta \text{rate}_{\text{H}_2} &= \frac{\Delta n_{\text{H}_2}}{n_{\text{H}_2}} \times \text{rate}_{\text{H}_2} \\
&= \pm 3.75\% \times 1.36 \times 10^{-7} \text{ mols}^{-1} \\
&= \pm 0.05 \times 10^{-7} \text{ mols}^{-1}
\end{aligned} \tag{14}$$

5 Discussion and Conclusion

The diagram suggests strong correlation between the rate and the concentration. The best fit line has

- a gradient of $4.571 \times 10^{-7} \text{ L s}^{-1}$
- and a y-intercept of $0.548 \times 10^{-7} \text{ mols}^{-1}$.

The error on the independent variable was too insignificant to be shown on the graph. The errorbar on the y-axis is relatively small, showing high precision of the experiment.

The dots and error bars indicates strong linear relationship between the rate and the concentration, which can be quantified with a high r^2 value of 0.989032. The linear correlation suggests that the initial hypothesis is valid.

Not all the error bars are passed through by the best fit line. The last error bar is significantly lower than the trend line of the former four. This deviation likely resulted from the high concentration of the last several groups of trials. As is mentioned in the hypothesis part, high concentration can reduce molar conductivity and cause side reaction. This will be further discussed in Section 6.





Although no identical study on exact same experiment was found, comparable research supports a similar linear trend at low concentrations. For instance, Zhang *et al.*'s (2020) study's trend at low concentration (under 1.0 M) showed a similar, almost-linear relationship and the slight reduce in gradient at around 1.0 M when rate (or the conductivity in Zhang *et al.*'s case) is plotted against concentration.

To conclude, the experiment provides strong evidence supporting the initial hypothesis, which states **the rate of electrolysis is linearly proportional to the concentration of magnesium chloride (MgCl_2) at low concentration, but can increase at a slower rate at higher concentration.**

6 Evaluation

The experiment was conducted successfully, providing sufficient data supporting the initial hypothesis. However, the expected deviation from linear relationship is not significant in the data. There is still room for improvement.

- **Imprecise marking:** thin marker pen is used to mark the meniscus of the initial solution, which still results in a relatively thick stroke that can lead to unexpected uncertainty. Using a graduated, thin glass ware instead can minimize the uncertainty from adjustment.
- **Thick gas syringe:** the gas syringe is thick and has an uncertainty of ± 0.1 mL. This is the main source of the uncertainty of the experiment. Using a thinner syringe can help reduce the uncertainty.
- **Gas leakage:** gas may be leaked from the rubber stoppers and the syringe, which may result in a lower rate measured. Using a more airtight setup and testing the seal before the experiment can help prevent gas leakage. Alternatively, using a Hoffmann voltameter can also help prevent gas leakage and get more accurate readings.
- **High concentration:** a concentration higher than general cases where water electrolysis take place is adopted, due to the limited time and apparatus in the laboratory. That resulted in side reaction, like the production of chlorine taking place. Using more dilute solution, larger electrode and longer experiment time can help stop the side reaction.
- **Bubbles' adhesion to electrodes:** some gas produced is observed to have delayed or no detachment to the carbon electrodes. That can cause undermining of the total gas production, which can lead to underestimation of the rate. Using smoother electrodes (like platinum electrodes) may help prevent that.
- **Side reactions:** The product $\text{Cl}_2(\text{g})$ may be released, producing a pungent, irritating odor that smells like bleach, or end up dissolved in water and undergo a series of complicated side reaction as described in Equations 15,16 and 17, producing chlorine water. Magnesium ion may also undergo side reactions mentioned in Equation 18.



These side reactions can reduce the rate of reaction by covering or corroding the electrodes, and can be minimized using more dilute solution, shorter experiment time or replacement with new electrodes during the experiment.

To conclude, despite the minor systematic errors discussed above, the experiment's high consistency and small error bars indicate the validity of the initial hypothesis and the reliability of the experiment. Hoffmann voltameter or digital gas sensor can be employed in future experiments to minimize leakage and reading errors.

References

- Atkins, P., & de Paula, J. (2014). *Atkins' physical chemistry* (10th ed.). Oxford, United Kingdom: Oxford University Press.
- Chemical Suppliers Ltd. (2023). *Safety data sheet: Distilled water (sds# 11558)*. PDF file.
- ChemicalBook. (2025). *Safety data sheet: Hydrogen*. PDF file.
- Fabrizzi, L. (2019). Strange case of signor volta and mister nicholson: how electrochemistry developed as a consequence of an editorial misconduct. *Angewandte Chemie International Edition*, 58(18), 5810–5822.
- Flinn Scientific, Inc. (2014a). *Safety data sheet: Chlorine water (sds# 231)*. Online.
- Flinn Scientific, Inc. (2014b). *Safety data sheet: Magnesium chloride (sds# 473)*. Online.
- Flowers, P. (2019). *Chemistry 2e*.
- Linde plc. (2022). *Safety data sheet: Oxygen, compressed (sds no. hko-010g)*. PDF file.
- Stock, J. T. (1991). The pathway to the laws of electrolysis. *Bulletin for the History of Chemistry*, 11, 86–92. (Issue 11 (Winter 1991))
- Zhang, W., Chen, X., Wang, Y., Wu, L., & Hu, Y. (2020). Experimental and modeling of conductivity for electrolyte solution systems. *ACS omega*, 5(35), 22465–22474.